	APM - Advanced Plant Model
	To continue, log in to APM.
	O GitHub - Software Repositories
RAM	P - Robotics and Automation MarketPlace
	or
Email	
Email	
Password	
Password	

The first access to the APM will present you the following sign-in screen:

The APM provides three authentication methods: GitHub, RAMP or email / password.

If the RAMP button is enabled, press it and proceed by authenticating yourself in the RAMP Platform (supply the email and password that you have on the RAMP platform).

If that's not the case, **in your first access to the APM**, you should introduce only your email (see left picture below). By pressing the 'Log In' button, the APM will register your email and assign a password that is exactly equal to the supplied email¹. You will then get access to the APM working space.

APM - Advanced Plant Model		APM Advanced Plant Model	v4.12.5 10-april-2023 Alerts: /
To continue, log in to APM. • GitHub - Software Repositories	Administration 💙	/ 倄 APM	/ E Administration / 📽 Users
RAMP - Robotics and Automation MarketPlace	L Users		
or	Catalogue >	test.com	
Email	Implantation >	xpto	
xpto@test.com Password	Runtime >	INESC TE	c
Password		aaa	
Log In		bbb	

You should now **change your password**. Go to the "Administration / Users" area (see above right picture). This screen identifies all the organizations and corresponding users that may use the APM. The domain of your email should correspond to one Organization (in the example we provided the email <u>'xpto@test.com</u>' and now have an Organization with name 'test.com'). Select your organization and then the User corresponding to your email.

¹ This step fails if the domain of your email is not known by the APM. You should contact the APM's responsible person to solve the issue.

You will get the following screen:

Administration 🌱	/ 🖀 APM / 🚍 Administration / 醬 Users / 🚍 Details			ea1_ASSEMBLY_LINE	•
		xpto			
Catalogue 🕽	test.com		0		
Implantation >	xpto		Y.		
Runtime >	INESC TEC		xpto		
	aaa		test.com		
	bbb	Edit Profile	* Change password	Update Picture	

Now by pressing the 'Change password' button you can insert your password.

From now on, on the APM's sig-in screen you will have to introduce your email and password.